

Ingenico iPP320/350 PinPad Setup Instructions

Entering Configuration Mode

To adjust connection or date/time settings, enter Configuration mode:

1. *Unplug and Re-insert* the USB cable from the computer going to the PinPad.
2. The pinpad will power up and eventually display a copyright page.
3. At the Copyright page, enter > [**2-6-3-4** > **Green**]
4. Press the > [**F**] button

Connection Settings

To set to Tab Wizard default connection type as USB:

1. [**3 - TDA** > **Green**]
2. [**0 - Configuration** > **Green**]
3. [**0 - Communication** > **Green**]
4. [**0 - Select Comm Type** > **Green**]
5. [**4 - USB<>/Serial Conv** > **Green**]
6. [**Red** > **Red** > **Red** > **1-Yes**]

Date/Time Settings:

To set Date and/or Time settings, follow these steps:

1. [**0 - TELIUM MANAGER** > **Green button**]
2. [**3 - Initialization** > **Green Button**]
3. [**1 - Parameters**]
4. [**Date and time** > **Green Button**]
5. [**Set Date** > **Green Button** > *Type in current date* > **Green**]
6. [**Set Time** > **Green Button** > *Type in current time* > **Green**]
7. [**Red** > **Red** > **Red** > **1-Yes**]